


Pointer Reset Instructions for Remote Reading Dial Thermometers

All Miljoco Dial Thermometers are factory-calibrated before shipment to be accurate within \pm one scale division. However, the instrument may be subjected to mishandling during transportation, therefore accuracy should always be verified against a known standard before installation. To verify accuracy, follow the steps outlined below:

1. Remove the lens to expose the pointer by unthreading counterclockwise (threaded lens) or by carefully prying (press-in lens) the lens away from the case using the molded slots.
2. Check the accuracy by inserting the temperature sensitive probe into an agitated bath of melting ice and water (32°F, 0°C) or boiling water (212°F, 100°C) at sea level.

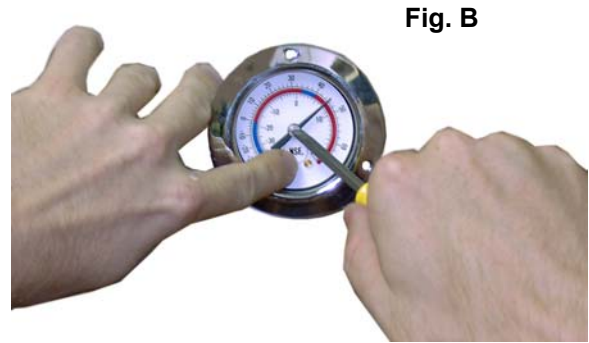

If the temperature reads high...

Fig. A

Stabilize the pointer by placing a finger next to the left side of the wide end. Insert a screwdriver into the slot in the pointer hub and carefully turn the hub clockwise until the desired setting is reached.

If the temperature reads low...

Fig. B

Stabilize the pointer by placing a finger next to the right side of the wide end. Insert a screwdriver into the slot in the pointer hub and carefully turn the hub counter-clockwise until the desired setting is reached.

MILJOCO CORPORATION

14335 E. NINE MILE RD., WARREN, MI 48089 888-888-1498 www.miljoco.com

09/02

Buy Miljoco dial thermometers at walkincoolerparts.com