

# POWER SPRING CONVERSION CARTRIDGE MODEL NO. W62-0001

**INSTALLATION INSTRUCTIONS**

**STEP #1**

Remove plastic plug at bottom of bracket and discard

**STEP #2**

Fasten hinge to walk-in box and close door

**STEP #3**

Lubricate all spring components with petroleum jelly and assemble in sequence illustrated (A-I)

**STEP #4**

Lubricate inside of spring-housing and place into hex opening of flange

**STEP #5**

Lubricate shaft of retainer pin "D" and slip down through the spring components, housing, flange and bracket until threads are exposed at base of bracket

**STEP #6**


Place screw driver into slot provided on top of retainer pin "D" and fasten bushing nut "F" to bottom of pin. Screw retainer pin into bushing nut until hole at bottom of pin can be seen through slotted opening of bushing nut. Insert grooved pin "G" through the bushing nut and hex pin

**STEP #7**

Press cap plug "H" flush into housing

**NOTE: IF ADDITIONAL SPRING PRESSURE IS REQUIRED, THE RETAINER PIN CAN BE FURTHER THREADED INTO BUSHING NUT AND THEN PINNED.**

ASSEMBLY IN ORDER AS SHOWN (A-I)

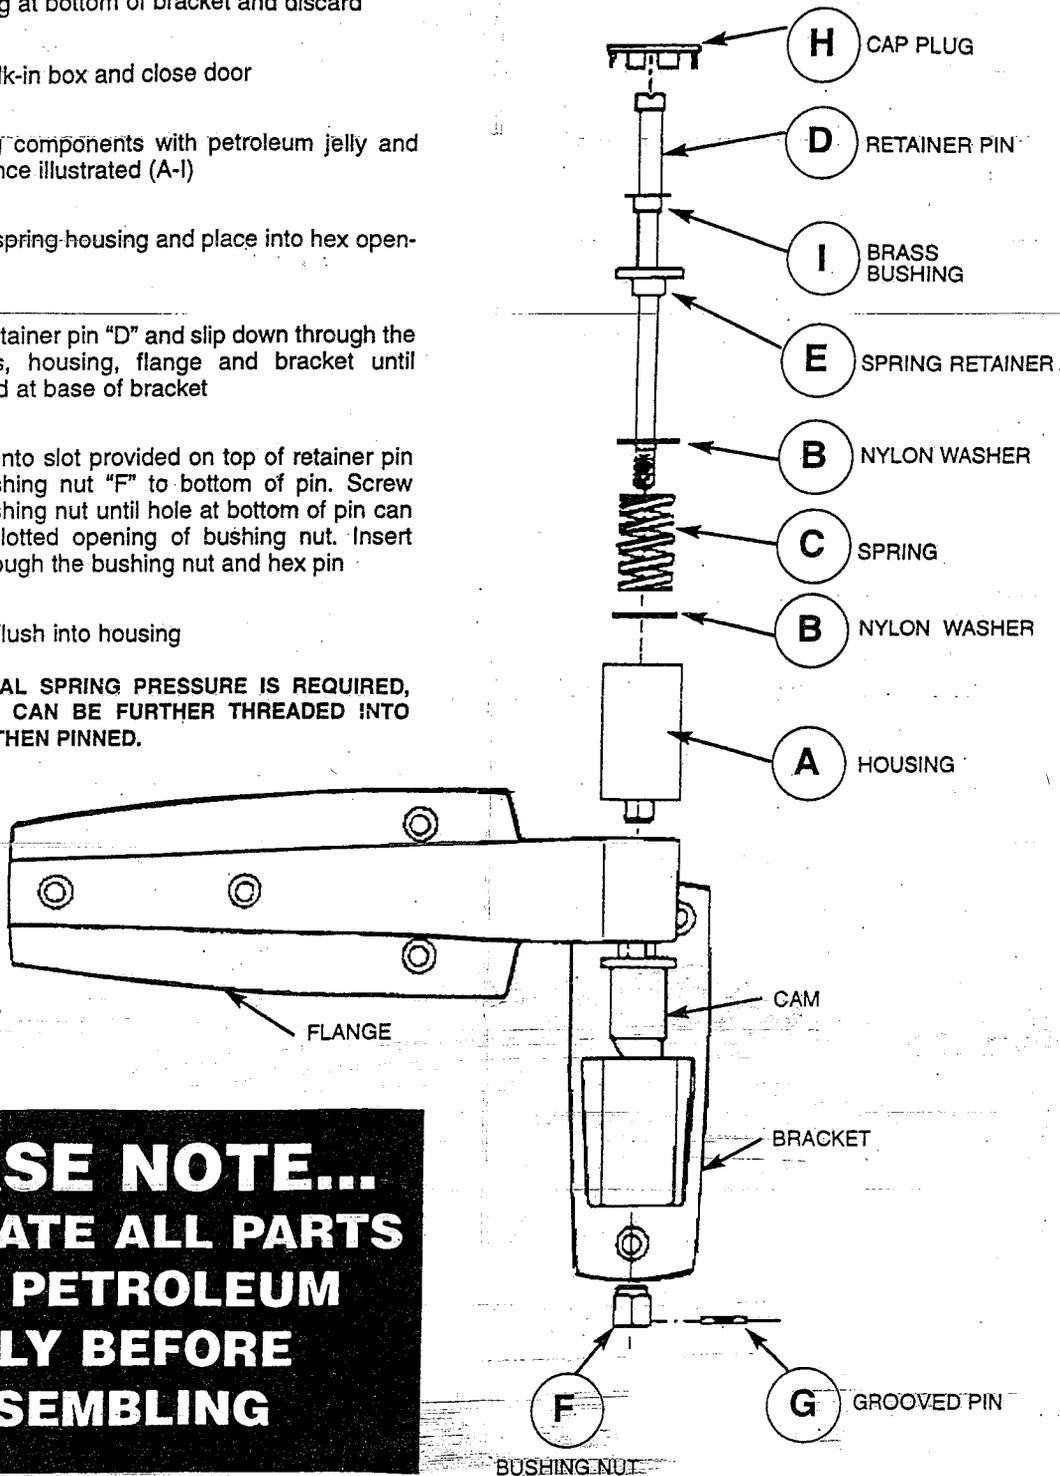

**PLEASE NOTE...  
LUBRICATE ALL PARTS  
WITH PETROLEUM  
JELLY BEFORE  
ASSEMBLING**



**Component Hardware Group, Inc.**

1890 Swarthmore Ave. • PO Box 2020 Lakewood, NJ 08701-4530 U.S.A.