




1-800-472-7450

## “EASIMOUNT” MOUNTING INSTRUCTIONS

- 1) Using the aluminum channel as a template, make sure channel is level and centered above door opening. Bar height should allow strips to clear floor 1/4". Mark hole pattern with pencil.
- 2) Drill holes and mount channel with proper fasteners.
- 3) Insert one End Cap at either end of channel.
- 4) Insert strips thru un-capped end of channel.
- 5) After verifying that all strips are evenly placed and overlapping properly, insert other end cap and trim strips of needed for proper floor height.

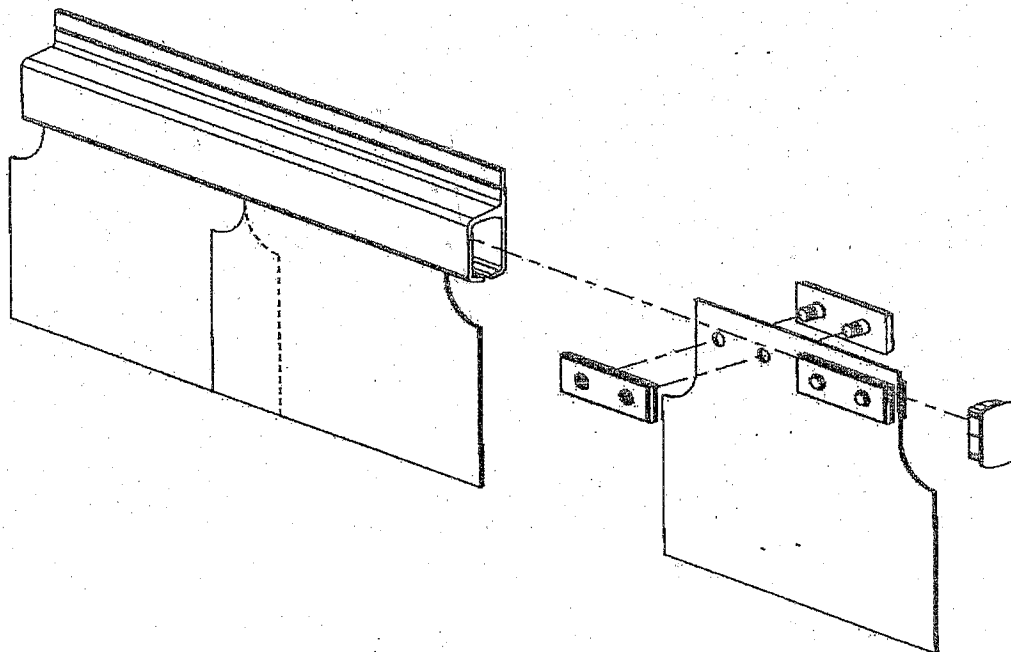

IS-00SA  
11-16-09