


KASON INDUSTRIES, INC

Model 1229 PUSH PLATE

USE PUSH PLATE ON ALL WALK-IN DOORS WITH PULL-HANDLES, OR DEADBOLT HANDLES.

Installation Instructions:

1. Place Label on PUSH Plate as illustrated. Ensure that the lettering is aligned.

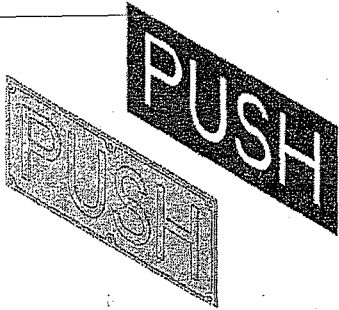

2. Mount the PUSH Plate to the door using #6 screws (not provided) at about eye level on the latch mechanism side of the door.

Right-Hand door with
KASON 948 Inside Release
Mechanism shown.

Jamb mounted release knobs,
or levers are also common with
pull, or dead-bolt handles.

