1908-603 WATER PROOF 1 OR 3 WAY SWITCH

INSTALL:

- 1. Snap switch into bracket. Fill conduit around wires with sealant.
- 2. Connect ground wire to green screw on bracket. UL approved ring terminal connector required.
- 3. Connect wires to switch using ¼" spade connectors.
- 4. Mount to junction box using two #6 x 3/4" pan head screw.

Recessed type junction box with minimum depth of 2-1/8" required.

5. Install the cover plate with #6-32 x ¾" oval head screws.

Open holes in cover plate using 1/8" drill or sharp tool.

ELECTRICAL SPECS:

Rating:

20 A@ 120 VAC General Use 5 A @ 125 VAC Tungsten 5 A @ 250 VAC Ballasted 4.9 A @ 125 VAC Electronic Ballast

Circuit:


Switch: SPDT

Indicator: Independently wired


UL Recognized

WARNING:


Wiring this switch or any other improperly can result in electrical shock, fire and / or death. Installer must follow all local building codes and laws for electrical installations.

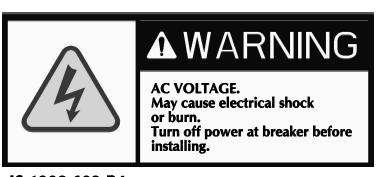


IS-1908-603-R4 RJH 10-18-12 PG 1 of 2

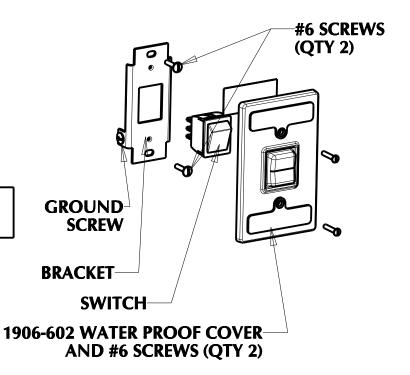


NOTICE! CONNECT ONLY COPPER OR COPPER CLAD WIRE TO THIS DEVICE!

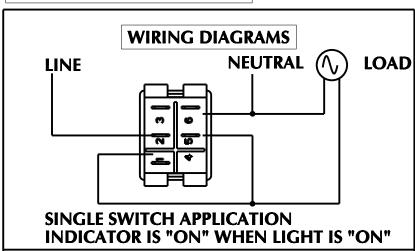

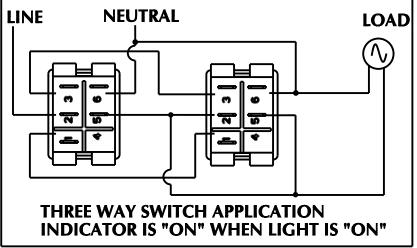

WIRING DIAGRAMS CONTINUED

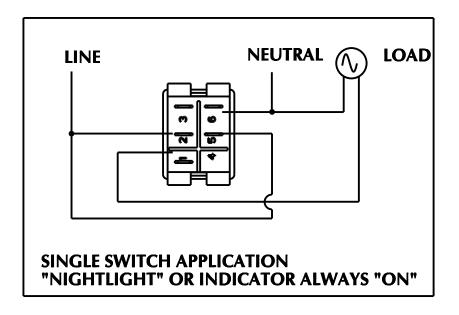

NOTICE! CONNECT ONLY COPPER OR COPPER **CLAD WIRE TO THIS DEVICE!**

